N18-125

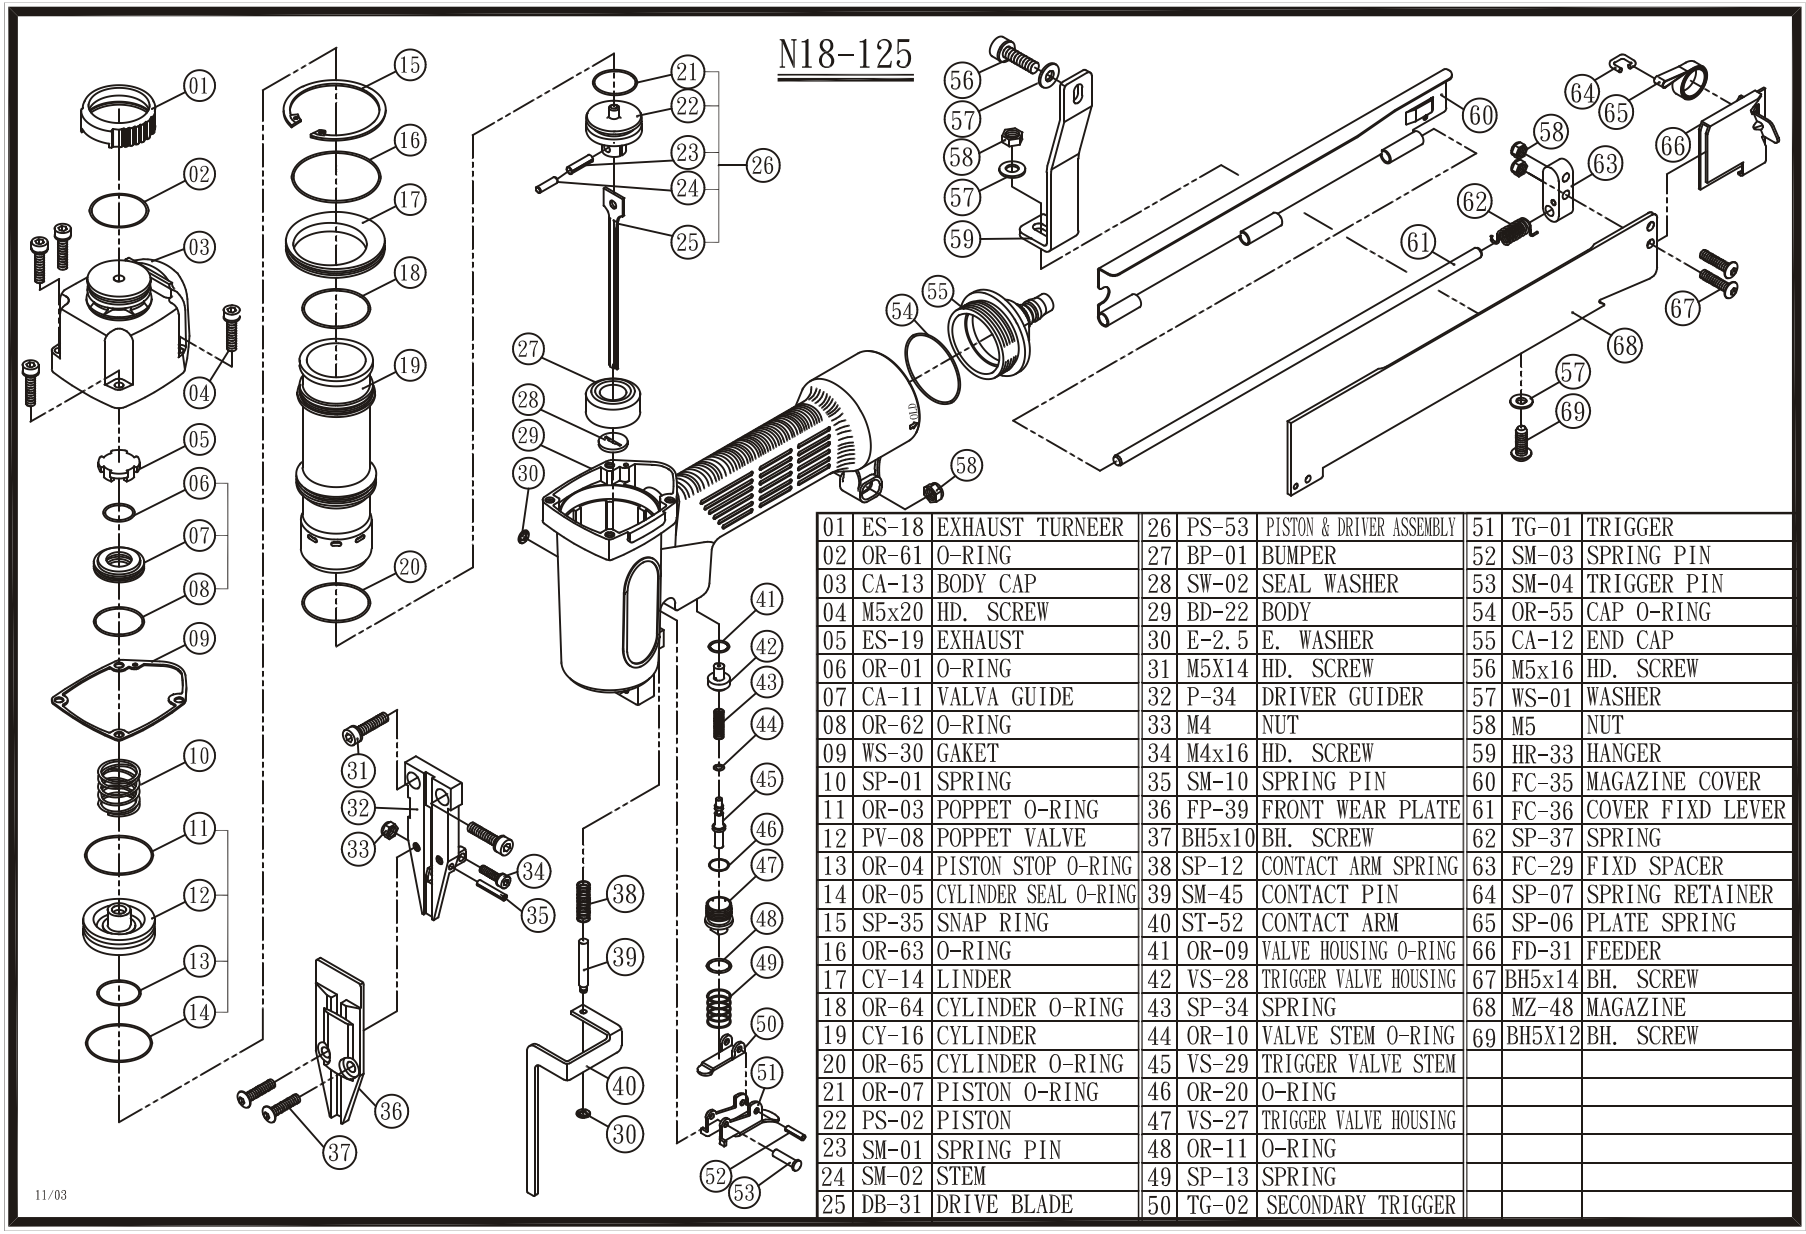

01	ES-18	EXHAUST TURNEER	26	PS-53	PISTON & DRIVER ASSEMBLY	51	TG-01	TRIGGER
02	OR-61	O-RING	27	BP-01	BUMPER	52	SM-03	SPRING PIN
03	CA-13	BODY CAP	28	SW-02	SEAL WASHER	53	SM-04	TRIGGER PIN
04	M5x20	HD. SCREW	29	BD-22	BODY	54	OR-55	CAP O-RING
05	ES-19	EXHAUST	30	E-2.5	E. WASHER	55	CA-12	END CAP
06	OR-01	O-RING	31	M5X14	HD. SCREW	56	M5x16	HD. SCREW
07	CA-11	VALVA GUIDE	32	P-34	DRIVER GUIDER	57	WS-01	WASHER
08	OR-62	O-RING	33	M4	NUT	58	M5	NUT
09	WS-30	GAKET	34	M4x16	HD. SCREW	59	HR-33	HANGER
10	SP-01	SPRING	35	SM-10	SPRING PIN	60	FC-35	MAGAZINE COVER
11	OR-03	POPPET O-RING	36	FP-39	FRONT WEAR PLATE	61	FC-36	COVER FIXD LEVER
12	PV-08	POPPET VALVE	37	BH5x10	BH. SCREW	62	SP-37	SPRING
13	OR-04	PISTON STOP O-RING	38	SP-12	CONTACT ARM SPRING	63	FC-29	FIXD SPACER
14	OR-05	CYLINDER SEAL O-RING	39	SM-45	CONTACT PIN	64	SP-07	SPRING RETAINER
15	SP-35	SNAP RING	40	ST-52	CONTACT ARM	65	SP-06	PLATE SPRING
16	OR-63	O-RING	41	OR-09	VALVE HOUSING O-RING	66	FD-31	FEEDER
17	CY-14	LINDER	42	VS-28	TRIGGER VALVE HOUSING	67	BH5x14	BH. SCREW
18	OR-64	CYLINDER O-RING	43	SP-34	SPRING	68	MZ-48	MAGAZINE
19	CY-16	CYLINDER	44	OR-10	VALVE STEM O-RING	69	BH5X12	BH. SCREW
20	OR-65	CYLINDER O-RING	45	VS-29	TRIGGER VALVE STEM			
21	OR-07	PISTON O-RING	46	OR-20	O-RING			
22	PS-02	PISTON	47	VS-27	TRIGGER VALVE HOUSING			
23	SM-01	SPRING PIN	48	OR-11	O-RING			
24	SM-02	STEM	49	SP-13	SPRING			
25	DB-31	DRIVE BLADE	50	TG-02	SECONDARY TRIGGER			